

2115Ti, 2115QTi, 2115PTi, 2125PTi and 2125QTi Air Impact Wrench Parts List

| Item | Part Description | Part Number | Item | Part Description | Part Number |
|------|---------------------------------|--------------|------|---------------------------------|--------------|
| • | Housing Assy (2115Ti) | 2115Ti-A40 | 7 | Retaining Ring | 4E-6 |
| | Housing Assy (2115QTi) | 2115QTi-A40 | 8 | Front Rotor Bearing | 2131-97 |
| | Housing Assy (2115PTi) | 2115PTi-A40 | 9 | Rear Rotor Bearing | R00H-97 |
| | Housing Assy (2125PTi) | 2125PTi-A40 | 10 | Cylinder | 2112-3 |
| | Housing Assy (2125QTi) | 2125QTi-A40 | 11 | Rotor | 2112-53 |
| 1 | Housing | | 12 | Vane Pack (set of 6) | 2112-42-6 |
| 3 | Nameplate | | + 13 | End Plate | 2112-11 |
| 4 | Information Label | | 14 | Hammer Case Gasket | 2112-36 |
| 5 | Warning Label | | + * | Hammer Kit (2115Ti and 2115QTi) | 2115-THK1 |
| 23 | Motor Gasket | | | Hammer Kit (2115PTi) | 2115PTi-THK1 |
| 24 | Reverse Valve | | | Hammer Kit (2125PTi) | 2125PTi-THK1 |
| 24A | O-Ring, Reverse Valve (top) | | | Hammer Kit (2125QTi) | 2125QTi-THK1 |
| 24B | O-Ring, Reverse Valve (bottom) | | 14 | Hammer Case Gasket | |
| 29 | Button Kit | | 15 | Hammer (2) | |
| 2 | Screw, Hammer Case (4 required) | 2115-638 | 15A | Hammer Pin (2) | |
| 3 | Nameplate (2115Ti) | 2115Ti-301 | 16 | Anvil Assy | |
| | Nameplate (2115QTi) | 2115QTi-301 | | Kit Grease | |
| | Nameplate (2115PTi) | 2115PTi-301 | * | Hammer Frame Assy Kit | 2115-K703 |
| | Nameplate (2125PTi) | 2125PTi-301 | 25 | Hammer Frame | |
| | Nameplate (2125QTi) | 2125QTi-301 | 15A | Hammer Pin (2) | |
| 4 | Information Label | 2115Ti-300 | * | Kit Grease | |
| 5 | Warning Label | WARNING-2-99 | | Anvil Assy (2115Ti and 2115QTi) | 2115-A626 |
| • | Power Regulator Assy | 2115-D249 | | Anvil Assy (2115PTi) | 2112P-A626 |
| 6 | Power Regulator | | | Anvil Assy (2125PTi) | 2112P-A726 |
| 6A | O-Ring, Power Regulator | | | Anvil Assy (2125QTi) | 2112-A726 |

Not illustrated

To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a (+) for every four tools in service.





| Item | Part Description | Part Number | Item | Part Description | Part Number |
|------|--|--------------|------|--|-------------|
| 16 | Anvil | | 28C | Spring | |
| 17 | Socket Retainer Spring or O-Ring | | 28D | Valve | |
| 18 | Retaining Ring or Retaining Pin | | 28E | Seat | |
| + * | Socket Retainer Kit (2115Ti and 2115QTi) | 2115-K425 | 28F | Support | |
| | Socket Retainer Kit (2115PTi) | 2115PTi-K425 | 28G | Retainer | |
| | Socket Retainer Kit (2125PTi) | 2125PTi-K425 | 29 | Button Kit | 2112-K75 |
| | Socket Retainer Kit (2125QTi) | 2125QTi-K425 | 29A | Forward Button | |
| 17 | Socket Retainer O-Ring or Spring | | 29B | Reverse Button | |
| 18 | Retaining Ring or Retaining Pin | | * | Tune-Up Kit | 2115-TK1 |
| + 19 | Bushing, Hammer Case | 2112-641 | 6A | O-Ring, Power Regulator | |
| | Hammer Case Assy | 2115Ti-D727 | 7 | Retaining Ring | |
| 19 | Bushing, Hammer Case | | 8 | Front Rotor Bearing | |
| 20 | Hammer Case | | 9 | Rear Rotor Bearing | |
| 21 | Grease Fitting | | 12 | Vane Pack (set of 6) | |
| 21 | Grease Fitting | D0F9-879 | 14 | Hammer Case Gasket | |
| + * | Trigger Assy | 2115-D93 | 22A | O-Ring-Trigger | |
| 22 | Trigger | | 23 | Gasket | |
| 22A | O-Ring, Trigger | | 24A | O-Ring, Reverse Valve (top) | |
| + 23 | Motor Gasket | 2112-283 | 24B | O-Ring, Reverse Valve (bottom) | |
| | Reverse Valve Assy | 2131-A329 | 28 | Inlet Parts Kit | |
| 24 | Reverse Valve | | 30 | Inlet Clip Removal Tool | 2131-322 |
| 24A | O-Ring, Reverse Valve (top) | | | "Pump-n-Grease" (Grease & Gun Kit) | 500C |
| 24B | O-Ring, Reverse Valve (bottom) | | + * | Air Care Kit (grease gun, grease, oil) | 115-LBK1 |
| 25 | Hammer Frame | | * | Grease (replacement tube for -LBK1) | 115-4T |
| * 26 | Inlet Bushing Assy (incl. 27, 28) | 2135-D565 | * | Air Tool Oil (4 oz. Bottle) | 10Z4 |
| 27 | Inlet Clip | 2131-57 | * | Grease (1 lb can) | 105-1LB |
| 28 | Inlet Parts Kit | | * | Grease (8 lb can) | 105-8LB |
| 28A | Washer | 2131-K303 | * | Kit Grease | 105-6GR |
| 28B | O-Ring, Seal | | | • | • |

Not illustrated

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center. Refer all communications to the nearest **Ingersoll-Rand** Office or Distributor.

Related Documentation

For additional information refer to:
Air Impact Wrench Product Safety Information Manual 04580916,
Air Impact Wrench Product Information Manual 04584702.

Manuals can be downloaded from www.irtools.com.



To keep downtime to a minimum, it is desirable to have on hand certain repair parts. We recommend that you stock one (pair or set) of each part indicated by a (+) for every four tools in service.