


Model 326G Cut-Off Air Tool - Exploded View

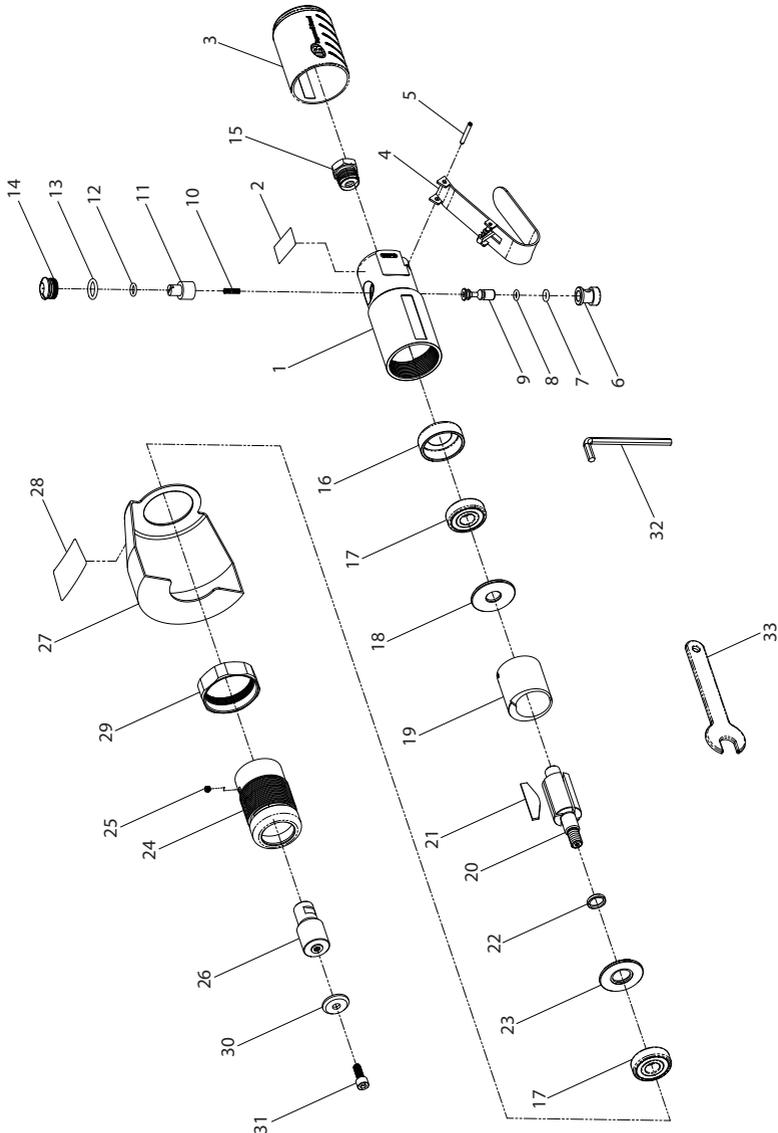

(Dwg. 45661451)



Model 326G Cut-Off Air Tool - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
*	Housing Kit	326G-A40	*	Motor Assembly	326G-A53
1	Housing	---	16	Spacer	---
2	Label	326G-301	17	Bearing	---
3	Grip	326G-747	18	Rear End Plate	---
4	Throttle Lever Assembly	326G-A400	19	Cylinder	---
5	Throttle Lever Pin	---	20	Rotor	---
*	Throttle Valve Kit	326G-K302	21	Vane (4)	---
6	Bushing	---	22	Bushing	---
7	O-Ring	---	23	Front Endplate	---
8	O-Ring	---	24	Cylinder Housing	---
9	Valve Stem	---	25	Screw	---
10	Valve Spring	---	26	Collet	---
11	Regulator	---	*	Spark Shield Assembly	326G-A931
12	O-Ring	---	27	Steel Spark Shield	---
13	O-Ring	---	28	Warning Label	326G-99
14	Throttle Valve Plug	---	29	Spark Shield Lock Nut	326G-27
15	Inlet Bushing	326G-565	30	Wheel Flange	326G-337
			31	Wheel Flange Screw	326G-338
			32	Flange Screw Wrench	326G-68
			33	Arbor Wrench	326G-69

* Not Illustrated.

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

Related Documentation

For additional information refer to:

Product Safety Information Manual 45661436.

Product Information Manual 45661105.

Manuals can be downloaded from ingersollrandproducts.com