

33387-2 BRAKE SHOE KIT
FOR USE WITH LINK OR ROLLER CHAIN HOISTS**NOTICE**

1. Brake shoes must be replaced as a pair.
2. Brake adjustment should be made with air turned on and with rated load attached to lower hook. Operate hoist to raise load applying slight pressure to pendant control. If load starts to lower before it is raised by motor, tighten brake until no slippage is evident. Care should be taken not to tighten brake more than necessary to hold load. If brake is too tight, it will cause erratic hoist control.

For parts and service information, contact your local ARO distributor, or the Customer Service Dept. of the Ingersoll-Rand Distribution Center, White House, TN at PH: (615) 672-0321, FAX: (615) 672-0801.

ARO Tool Products

Ingersoll-Rand Company
1725 U.S. No. 1 North • P.O. Box 8000 • Southern Pines, NC 28388-8000
©1999 INGERSOLL-RAND COMPANY • PRINTED IN U.S.A.